




Before you begin...

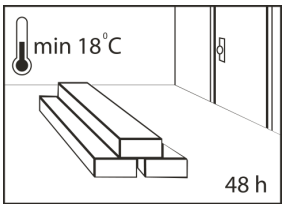


Store the package flat in the room for at least 48 hours at min. 18 °C to acclimatize.

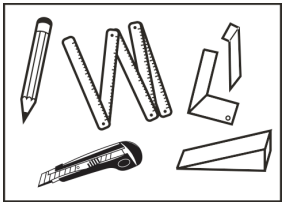

Prepare all required tools (saw, tape measure, pencil, spacer blocks, mallet, tapping block, pull bar).

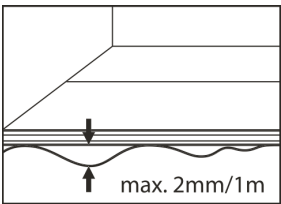


Level and offset any uneven floor areas (max. height deviation: 2 mm per 1 meter).

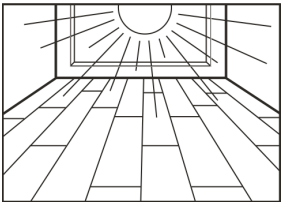


Lay planks parallel in the direction of incoming sunlight.


Step by step application guide.

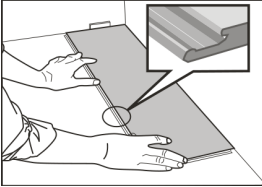


First plank, first row: Place spacer blocks of min. 8 mm against the left wall and position the first plank firmly against them.

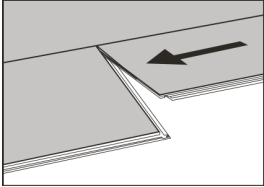


Second plank, first row: Place this plank gently and tight against the short end of the first plank without any gaps.

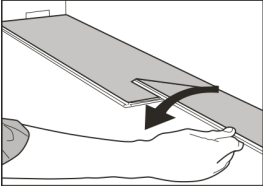


Lock the second plank into the first one by folding and pressing down in a single fluid motion.

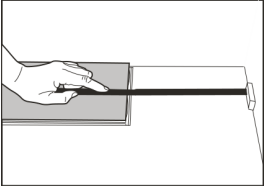


At the end of the first row, place a $\approx$ 15 mm spacer against the wall and measure the exact length needed for the final plank.

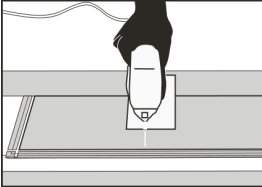


Turn the plank face down and cut at the mark (use a jigsaw face down, or a handsaw with the decor facing up).

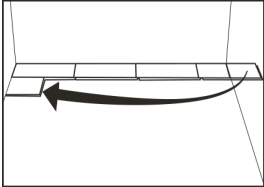


Second row: The first plank of the second row must be at least 500 mm long. Place it with spacing against the wall.

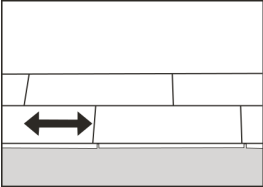


Ensure the offset between short ends of planks in parallel adjacent rows is at least 400 mm.

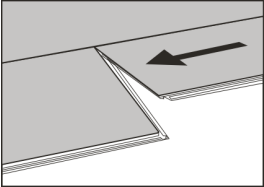


Second plank, second row: Place the panel gently and tight to the short end of the previous panel.

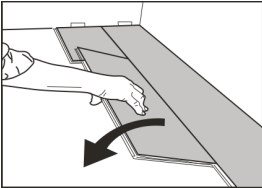


Angle the plank, apply a slight press to the left toward the previous panel, and fold down in a single action to lock.

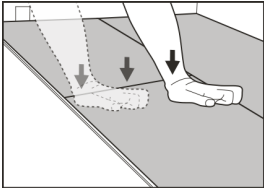


Press gently or tap lightly along the short end of the installed panel using a tapping block.

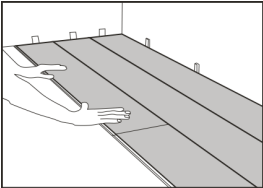


After laying 2-3 rows, adjust the entire assembled section against the wall spacers ($\approx$ 15 mm) so no gaps remain.

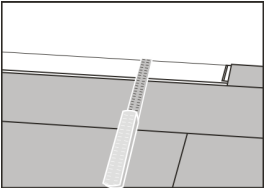


Measuring the last row: Place $\approx$ 15 mm spacers against the wall, measure, cut panels lengthwise, and glue short ends if required.

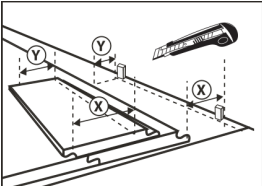


Fit and adjust the final row firmly into place using a pull bar.

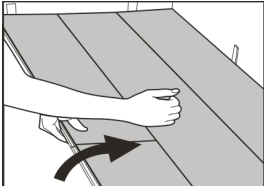


Disassembly method: Carefully lift the entire row along the long side at an angle to release and unlock.

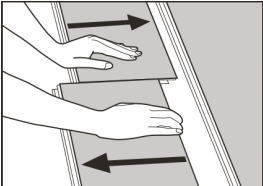


Disassemble panels along the short ends by sliding horizontally by hand. (Do not fold up).

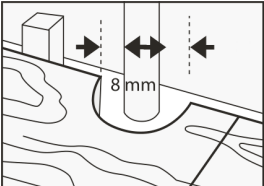


Enable expansion: Maintain a minimum 8 mm expansion gap around all walls, pipes, and perimeter edges.

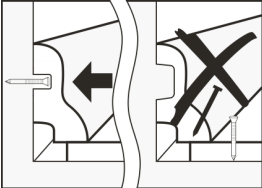

Floating floor installation: Do not nail, screw, or glue the panels directly to the subfloor.

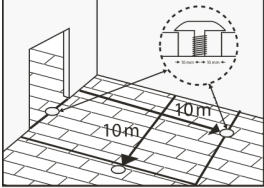

Expansion joint: Install expansion profile joints for continuous surface areas exceeding 10 m $\times$ 10 m.

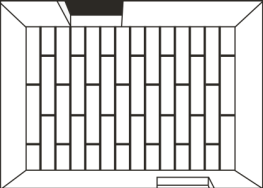

Installation Done! Your floor is now complete and ready for use.